

PAJERO GEN 2

Mitsubishi



Installation Instructions





Due to the intrusion of the hinge this product is not suitable for vehicles with passengers in the seats adjacent to the Emuwing. The Emuwing is designed as an addition to a storage system and should be removed if the seats adjacent to the Emuwing are ever reinstated.

Parts List



Emuwing Frame

- One per side



Support brackets

- Two (2) per side



Pinchweld (if applicable)

- One (1) length per side



M5 CSK bolts- Eight (8) per side attached to frame



Handle Two (2) per side



Emuwing Panel

- One per side



Hinge and Faceplate

- Two (2) per side



Gas Struts

- Two (2) per side



Panhead bolts

- Four (4) per side



Keys & Keyring

- One (1) keyring with two (2) keys for each Emuwing



Latch Plates and spacers

Two (2) per side

With the second

Polyurethane Glue & nozzle

- One (1) per kit



Adhesive Weatherstrip

- One (1) length per side



3M Primer

- One (1) per side



M4 Hex bolts, Washer & Nyloc nut

- Eight (8) per side



Chalk Pen One (1) per kit

Tools required:

- 4mm Allen Key
- Medium size Phillips's head screwdriver
- Eight to Twelve Clamps per side
- Spanners 7mm, 8mm and *27mm
- Sockets 7mm and 10mm
- Caulking/Glue gun

Other things that you will need:

- Wax and Grease remover.
- Clean rags or kitchen paper
- Masking tape
- Trim pry



Due to the intrusion of the hinge this product is not suitable for vehicles with passengers in the seats adjacent to the Emuwing. The Emuwing is designed as an addition to a storage system and should be removed if the seats adjacent to the Emuwing are ever reinstated.

Contents

1: Remove the existing rear window	3
- Remove interior trim, glass and rubber	3
- Applying the pinch weld	3
2: Installing the frame.	3
- Positioning the frame	3
- Gluing the frame into place	4
Figure 3	
3: Attaching the door panel	
- Place and tighten the support brackets	
- Attach the Latch plates and Spacers	
- Placing the door panel	6
4: Adjusting the door panel depth and fitting the weather-strip	
- Adjustments – left/right and up and down	7
- Marking the door panel	
- Applying the Primer	
- Applying the weather-strip	
- Adjustments – Depth.	

The following instructions detail the installation of your new EmuWing kit; allow a total of two to three hours fitting time for each panel excluding curing time. Read the instructions thoroughly before starting.

Allow any additional time that may be required for rust repairs.

We have installations on our YouTube channel which may be worth watching before commencing.



Due to the intrusion of the hinge this product is not suitable for vehicles with passengers in the seats adjacent to the Emuwing. The Emuwing is designed as an addition to a storage system and should be removed if the seats adjacent to the Emuwing are ever reinstated.

1: Remove the existing rear window

- Remove interior trim, glass and rubber.

Remove the current pinch weld from the interior to reveal four metal clips underneath.

Detach the four metal clips, allowing the window to be easily removed, leaving behind residual sealant that can be effortlessly cleaned up.

- Applying the pinch weld.

After successfully removing the rear window, carefully wash off any dirt or residual glue from around the seam. Use a mild detergent or adhesive remover with a soft cloth or sponge to avoid scratching the surface.

Inspect the exposed area for any signs of rust. If rust is present:

Address rust using an appropriate method (e.g., sanding, rust converter).

If rust is extensive, consider consulting a professional for proper treatment.

With the exposed seam cleaned and rust addressed, proceed to apply the pinch weld supplied in the kit. Follow these steps:

Start applying from the bottom edge of the exposed seam, e.g. Join at the bottom.

Ensure even and secure attachment as you continue around the seam.

Pay special attention to securing interior trims and the roof lining in place during the application process.

After applying the pinch weld, carefully inspect the interior trims and roof lining to ensure they are securely held in place.

2: Installing the frame.

- Positioning the frame.

Before attempting to glue the frame into position, ensure a clear understanding of its positioning. Position the frame centrally with an even gap all the way around.

Note that if perfection is not attained, adjustments can be made during the door panel installation.

Prior to applying any glue, follow these steps:

Place the frame in place, apply a clamp on each corner of the frame for stability.

Take your time to ensure the frame is securely positioned.

To facilitate clean-up in case of excess glue, apply masking tape around the frame's position. This step is important for maintaining a tidy finish:

Apply the tape carefully, ensuring it covers the area where glue may squeeze out.



Due to the intrusion of the hinge this product is not suitable for vehicles with passengers in the seats adjacent to the Emuwing. The Emuwing is designed as an addition to a storage system and should be removed if the seats adjacent to the Emuwing are ever reinstated.

- Gluing the frame into place.

Ensure that the surface of the pinch weld and frame are thoroughly clean, dry, and free from all traces of grease, oil, and dust.

Apply a bead of Sikaflex around the outside of the pinch weld, paying particular attention to the corners. Increase the bead enough to fill any higher spots between the body and the frame. Apply a continuous bead approximately 5mm thick, increasing to 6/7mm around the corners. Ensure there are no gaps, and the bead is applied evenly.

Have clamps ready for use as you place the frame into position.

Once the frame is in place, apply the clamps, paying special attention to the corners. Leave the assembly to dry for at least 24 hours. Use a torch to inspect for any light between the frame and the car body.

While the glue is still wet and the frame is clamped, carefully clean up any excess glue from around the frame. The masking tape applied earlier will assist in this process. Once cleaned, remove the masking tape.

After applying the glue and placing the frame, allow it to dry undisturbed for a minimum of 24 hours. This ensures a secure bond – see table below for exact curing times.

To clean up excess glue, use wax and grease remover while the glue is still wet. Do not allow the glue to dry, as it will be challenging to remove without risking damage to the paintwork.

You can also apply a bead around the inside edge of the frame where it meets the pinch weld, smoothing this out carefully to improve the finished product and improve the adhesive bond.

Do Not proceed with fitting any hardware to the frame until the glue has set and the frame is securely in place (at least 24 hours). Figure 3.

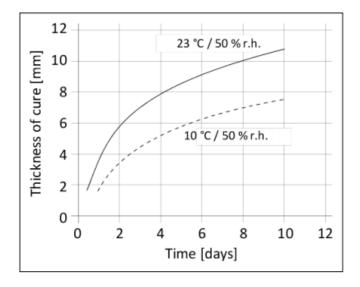


Figure 3



Due to the intrusion of the hinge this product is not suitable for vehicles with passengers in the seats adjacent to the Emuwing. The Emuwing is designed as an addition to a storage system and should be removed if the seats adjacent to the Emuwing are ever reinstated.

3: Attaching the door panel.

- Place and tighten the support brackets.

Assemble the support brackets on top of the frame, utilizing the M5 bolts.

Use the support brackets to clamp the frame to the pinch weld. When tightening, avoid over-tightening; instead, ensure to tighten them firmly to approximately 5 Newton-meters (5NM).

Ensure the two bolts are evenly tightened, aiming for consistent tension. This alignment is crucial to match the slots in the two brackets and secure a firm connection against the body.

Refer to Figure 5 for a visual representation of the assembly process.

 


Figure 5.





- Attach the hinges.

Attach the hinges to the frame using the supplied

4mm nuts, bolts, and washers.

Ensure that the faceplate protrudes approximately 10 to 12mm from the frame.

The exact depth of the faceplate will be adjusted at a later stage in the process.

Tighten to approximately 4 Newton-meters (4NM). Refer to Figure 6 for a visual representation of the hinge attachment.

- Attach the Latch plates and Spacers
Now we can attach the latch plates to
the bottom edge of the frame, spacers
are also supplied but may not be
needed.

Use the latch plates to clamp the frame to the pinch weld, placing the latch plate from the inside and attach using two M5 bolts.

ensure to tighten them firmly to approximately 5 Newton-meters (5NM).

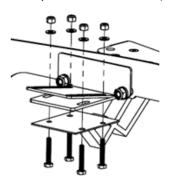


Figure 6



Due to the intrusion of the hinge this product is not suitable for vehicles with passengers in the seats adjacent to the Emuwing. The Emuwing is designed as an addition to a storage system and should be removed if the seats adjacent to the Emuwing are ever reinstated.

- Placing the door panel.

With the hinges in the closed position, place the door panel centrally.

Consider using a spacer at the bottom of the door panel to lift it slightly, ensuring correct alignment.

Refer to Figure 7 for visual guidance.

Note that when the gas struts are attached, the door panel may be pushed up as the hinges compress. Account for this by positioning the panel 1 or 2 mm lower than its final placement. Close the handles partially to allow the cam latches to secure the panel in place while fixing it into position.

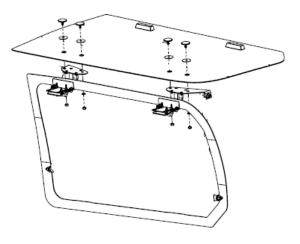


Figure 7

- Attach the gas struts.

Open the door and attach the struts, ensuring the wider end is positioned at the top. Close the panel carefully, observing if it touches the car during closure.

Once closed, note any required adjustments needed for aligning the door panel with the car.

Understand that the depth of the door can be fine-tuned later. At this stage, focus on the panel's position in relation to the car.

<u>Before loosening any nuts for any further adjustments, detach the gas struts first</u> to prevent the hinges from twisting.

Тор



Due to the intrusion of the hinge this product is not suitable for vehicles with passengers in the seats adjacent to the Emuwing. The Emuwing is designed as an addition to a storage system and should be removed if the seats adjacent to the Emuwing are ever reinstated.

4: Adjusting the door panel depth and fitting the weather-strip.

- Adjustments – left/right and up and down.

The door panel can be adjusted up/down and left/right by loosening the pan heads attaching the door to the hinge.

Before proceeding, make note of the required adjustments and mark the current position of the hinge plate on the inside of the door.

Remove the struts by unscrewing them from the mounting eyelets and loosen the pan heads after making necessary notes and markings.

Adjust the door panel to the desired position both vertically and horizontally.

Once satisfied with the adjustments, reinstall the gas struts.

With the door panel in its adjusted position and struts reinstalled, proceed to attach the weather seal to the inside.

- Marking the door panel

Close the door panel carefully and mark inside the door panel around the inside edge of the frame.

Note the distance between the line and the edge of

- Applying the Primer

your frame.

Before attaching the weather strip, use the supplied 3M primer on the areas where the weather strip will be applied.



Apply the primer using long strokes, ensuring precise coverage exactly where the weather strip will be placed. Allow the primer to dry for ten to fifteen minutes before attaching the weather strip.

Toward outer edge of pane

After marking and priming the door as specified.

Applying the weather-strip.

Attach the weather seal to the door with the lip toward the outside edge of the door panel, following just outside of the marked lines and placing the weather seal 3M glue backing onto the previously applied primer.

Ensure the seal aligns correctly with the frame. Correct alignment is crucial to prevent moisture and dust from entering the back of the vehicle.

Apply pressure to the weather seal and ensure it has fully adhered all the way around the panel. Upon first closure after attaching the weather seal, carefully tuck the weather seal up using a plastic pry to prevent damage. Allow the door panel to close – do not close the handles. From the inside of the panel carefully tuck the weather seal into position by pushing it into the gap. This will prevent the seal from rolling and ensure excellent adhesion.

Close the door fully and close the handles to secure in place.



Due to the intrusion of the hinge this product is not suitable for vehicles with passengers in the seats adjacent to the Emuwing. The Emuwing is designed as an addition to a storage system and should be removed if the seats adjacent to the Emuwing are ever reinstated.

- Adjustments – Depth.

Check the depth to ensure alignment with the car and proper compression of the rubber seal.

If depth adjustments are needed, remember to first detach the gas struts, then loosen the hinges from the top supports (the M4 bolts).

Apply pressure to each hinge from outside of the door, where the hinge meets the door until you observe the rubber compressing onto the frame.

Re-tighten the bolts after making the necessary adjustments.

If additional help is required, please feel free to give us a call on +613 8592 1926 between the hours of 10am and 4pm AEST – Monday to Friday.

Website: emuwing.com.au
Phone: +61 3 9017 1614
Email: info@emuwing.com.au







For Distributor and Installer enquiries please email sales@emuwing.com.au

9/146 Northbourne Road Campbellfield Victoria, 3061

ABN: 84 617 251 733